Pocket Album

1.5" keychain digital photo viewer

User's Guide

DIGITAL
FOCI

Thank you for choosing Digital Foci.

At Digital Foci, our mission is to *enhance your life by smart usage of digital technology.*

We promise to provide you:

- Easy-to-use products to help you manage and enjoy your digital content
- Attractive products to accentuate your unique style
- Education and support to help you understand the quickly changing digital technology

We aim to provide you a level of customer satisfaction that exceeds your expectations.

Let Digital Foci help *Optimize your Digital Living.*

For more information about Pocket Album and other products from Digital Foci, please visit our website at:

www.digitalfoci.com

Congratulations on purchasing your Pocket Album - 1.5" keychain digital photo viewer.

Share and relive your precious memories anytime, anywhere with Pocket Album. Pocket Album runs on battery power with up to 9 hours of battery life and can hold up to 74 images.

Pre-load your favorite photos on Pocket Album and give it to your friends or family as the perfect sentimental gift.

Computer System Requirements:

1) Windows Vista/XP/2000 operating system
2) CD-ROM
3) One available USB Port

Care for Pocket Album:

- Do not expose Pocket Album to liquids, precipitation, or moisture.
- Do not drop, jar, bump, shock or expose Pocket Album to severe vibration.
- Do not touch the LCD screen with sharp objects or or extend excess pressure or force on the screen.
- Use soft cloth to clean the LCD screen; do not use intense cleanser.

Package Contents:

- Pocket Album
- USB-AC power adapter
- Resource Disc with Photo Viewer Software
- USB cable
- User's Guide

Device Layout

Front View

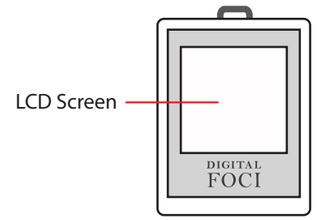

Back View

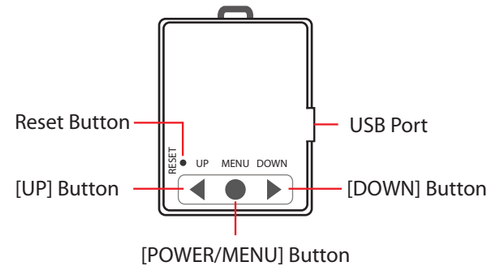

Technical Specifications

Model no.	PAL-015
LCD display	1.5" LCD screen
Screen resolution	128 x 128 pixels
Internal memory	8MB (can hold up to 74 pictures depending on picture size)
Image format support	JPG, BMP *(Note: photos must be transferred via Photo Viewer Software)*
Slideshow options	Manual slideshow & Auto slideshow
Slideshow intervals	Adjustable from 5 seconds up to 2 minutes
LCD contrast adjustable	Yes
Battery power	3.7V 210mAh built-in rechargeable Lithium-Ion battery Rechargeable via USB or USB-AC power adapter
Battery life	Up to 9 hours
External power	110-240V AC to 5V/200mA-300mA DC
On board clock	Yes
On/off timer	Yes
Computer interface	USB 2.0 (compatible with USB 1.1)
OS compatibility	Windows Vista, XP Home/Pro, 2000
Software	Photo Viewer Software for converting JPG & BMP images
Dimensions	2.2" (L) x 1.6" (W) x 0.5" (H)
Weight	1.2 oz.

Technical Support

If you have any questions about using your Pocket Album, please contact Digital Foci technical support by email at: *support@digitalfoci.com* or call 1-888-NOW-FOCI.

FAQs

Check the Digital Foci website (*www.digitalfoci.com*) for Frequently Asked Questions and additional tips.

Powering On/Off Pocket Album

Turning on Pocket Album

To turn on Pocket Album, press and hold the [MENU] button located on the back of the device for 5 seconds. The Pocket Album screen will turn on.

Turning off Pocket Album

To turn off Pocket Album, press the [MENU] button to access the Menu screen. Select **OFF** by pressing the [MENU] button again.

Charging Pocket Album Battery

Pocket Album has a battery life of up to 9 hours on a full charge. You can charge the battery either by the included USB-AC power adapter or by USB power from your computer.

Pocket Album will display a "battery low" warning when the battery is running low. The battery should be recharged.

Charging Pocket Album by USB-AC adapter

It takes about 2 hours to fully charge an empty battery on Pocket Album using the included USB-AC power adapter.

1. Plug the USB-AC power adapter into a wall outlet. The Red LED will light up, indicating it is plugged in.
2. Connect the larger end of the included USB cable to the USB port on the USB-AC adapter. Connect the smaller end to the USB port on your Pocket Album.
3. On the Pocket Album screen you will see 2 options: *USB Charge* and *USB Update*. Select ***USB Charge*** to start charging the device.
4. The Green LED on the USB-AC adapter will light up, indicating Pocket Album is charging.
5. When Pocket Album is fully charged, the Green LED will go off to indicate that the battery is full.

Charging Pocket Album by USB

It takes about 2 hours to fully charge an empty battery on Pocket Album by USB power from your computer.

1. Connect Pocket Album to your computer with the USB cable.
2. On the Pocket Album screen you will see 2 options: *USB Charge* and *USB Update*. Select ***USB Charge*** to start charging the device.

Viewing Photos on Pocket Album

Press the [MENU] button on Pocket Album to access the the device Menu as shown here.

Press the [UP] and [DOWN] buttons to move the selection arrow up and down. Press the [MENU] button to make your selection.

OFF

Select **OFF** to turn off Pocket Album.

Display Mode

Select **Display Mode** to set Auto Slide or Manual Slide for the slideshow playback mode.

Auto Slide: Photos will advance automatically based on the time interval setting (default is 10 seconds).

After selecting *Auto Slide*, you can adjust the slideshow time interval by pressing the [UP] and [DOWN] buttons. Press and hold the buttons to increase the speed of the adjustment. You can set the time interval between 5 and 120 seconds.

Manual Slide: Photos will not advance automatically. Press the [UP] and [DOWN] buttons to change the photo displayed on the screen.

Clock Set

Select **Clock Set** to set date and time on Pocket Album.

Adjust time by pressing the [UP] and [DOWN] buttons. Press the [MENU] button to navigate to the next field.

The system clock is displayed as: YYYY-MM-DD, followed by HH : MM : SS using a 24-hour clock. This means that instead of using AM/PM to denote morning/evening, PM is designated by 13:00 ~ 24:00 hours.

Auto ON/OFF

Select **Auto ON/OFF** to enable or disable the Auto On/Off timer.

Auto ON/OFF On: Select to enable the Auto On/Off timer. Press the [UP] and [DOWN] buttons to set the desired time for Auto On and Auto Off. Press the [MENU] button to navigate to the next field.

Auto ON/OFF Off: Select to disable the Auto On/Off timer.

Clock Display

Select **Clock Disp** to hide or show the clock.

Disp Clock Normal: Select to show the system clock on full screen instead of showing the photos. Press the [MENU] button again to return to photos.

Disp Clock Water Mark: Select to show the system clock on the screen along with the photo display.

To hide the clock, first select "*Disp Clock Normal*", then press the [MENU] button to return to photos.

LCD Contrast

Select **LCD Contrast** to adjust the brightness level of the screen.

Adjust the screen contrast level by pressing the [UP] and [DOWN] buttons. The higher the value, the brighter the screen and the higher the optimal viewing angle. You can adjust the contrast level between 0 and 16.

Note: Adjusting the contrast value will change the optimal viewing angle of the screen. Select the best viewing angle for your use.

Exit

Select **Exit** to exit from Menu and return to normal operation.

Resetting Pocket Album

In the case that Pocket Album encounters an error and freezes, you can reset it by pressing the [RESET] button on the back of the device using a paper clip or similar pointy object.

The Pocket Album settings will be reset to factory default. You will not lose any pictures saved on Pocket Album.

Adding Photos to your Pocket Album with Photo Viewer Software

About Photo Viewer Software

Photo Viewer Software is a picture conversion tool required to import photos to display on your Pocket Album.

Run Photo Viewer Software to transfer JPG or BMP images from your computer to Pocket Album. The software lets you crop and rotate the images you wish to transfer, before automatically resizing them for optimal storage and display on Pocket Album.

Tips for Selecting Photos for Pocket Album

Here are some tips to help you create the best images from your photos to display on the 1.5" Pocket Album screen.

1. Start with high-resolution images. These images will result in better image quality when cropped.
2. Select images with less complex backgrounds.
3. Crop photos to show face shots or close-ups.

** Please contact Digital Foci Tech Support if you need further assistance.*

Installing Photo Viewer Software

1. Insert the Resource Disc into your computer CD-ROM.
2. Locate and run "***PhotoViewer_setup.exe***" on the Resource Disc.
3. Follow the on-screen instructions to complete the installation.

Running Photo Viewer Software

1. Before starting Photo Viewer Software, make sure to connect Pocket Album to your computer with the USB cable.
2. Select ***USB Update*** on Pocket Album.
3. Double click on the ***Digital Foci Pocket Album Photo Viewer*** desktop icon to start the software. Alternatively, from the Start menu on your computer, click on Programs, and select ***Digital Foci Pocket Album Photo Viewer*** to run the software.

NOTE: DO NOT attempt to access Pocket Album on the computer directly as a removable disk. Pocket Album is only accessible via the Photo Viewer Software.

Using Photo Viewer Software

The Photo Viewer Software screen will open up as illustrated below. The window consists of 2 sections:
(a) The left section is the ***Browser Window***, where you can select and edit the photos to be added to your Pocket Album.
(b) The right section is the ***Device Window***, where you can view and edit the photos that are on your Pocket Album.

Selecting Images to be Converted:

In the ***Browser Window,*** browse through the directories on your computer and select the images (JPG or BMP format) you would like to convert. A preview of the selected photo will be displayed.

Editing Images to be Converted:

Auto select crop area: Click to auto select crop area. The red-dotted crop box represents the maximum crop area of the image. Use the mouse to move the crop area.

Manual select crop area: Click to manually select crop area. To draw the crop box, first point the mouse at the starting corner of the target crop area. Next, click and hold the button on your mouse and drag the box out. Release the mouse when the desired crop box is drawn. After the crop box is drawn, you can click and drag it to fine tune the positioning before cropping.

Rotate Right: Click to rotate the image 90° clockwise.

Rotate Left: Click to rotate the image 90° counter-clockwise.

Crop: Click to crop the image. The converted image will be displayed in the ***Device Window***.

Editing Images on Pocket Album (images displayed in the *Device Window*):

Save: Click to save the selected image to your computer. The image will be saved as a BMP file.

Delete: Click to delete the selected image from Pocket Album.

Rotate Left: Click to rotate the selected image 90° counter-clockwise.

Rotate Right: Click to rotate the selected image 90° clockwise.

Updating Images on Pocket Album:

Synchronize: Click to update your Pocket Album with images in the ***Device Window***.

You will see a confirmation message, "*Photo Viewer Data Synchronization complete*" when the images are successfully updated.

Version 3.0